

Quote Tote

Designed by Whistler Studios

Featuring the Born to Quilt Collection by Another Point of View

Size: 18" x 18"



39589-X



39591-X



39592-X

Fabric Requirements:

- 1/3 yard 39589-X Multi Quote Pattern
- 1/2 yard 39592-X Multi Diagonal Stripe
- 5/8 yard 39591-X Multi (lining) Polka Dot

Handles - D-Shaped Plastic Purse Handles - (Fabric .com)
Or any D shaped handles with maximum inside width of 10"



Cutting:

39589-X Multi Quote Pattern
Cut (2) 18 1/2" x 10 1/2" rectangles for bottom of tote outside

39592-X Multi Diagonal Stripe
Cut (2) 18 1/2" x 10 1/2" rectangles for top of tote outside
Cut (1) 17 1/2" x 5 1/2" rectangle for inside pocket

39591-X Multi Polka Dot
Cut (2) 18 1/2" X 20 1/2" rectangle for lining


Assembly:

All seam allowances are 1/4"

Outside:

1. Take one piece of the quote fabric and join at the top with one piece of the diagonal stripe. Press seam toward the quote fabric and edge stitch seam. Repeat for the other side.
2. With right sides together, join the bottom and sides up to the join line of the top and bottom. Clip seam at the join point where you stopped stitch line. Set aside. Pic 1

Clip seam allowance →

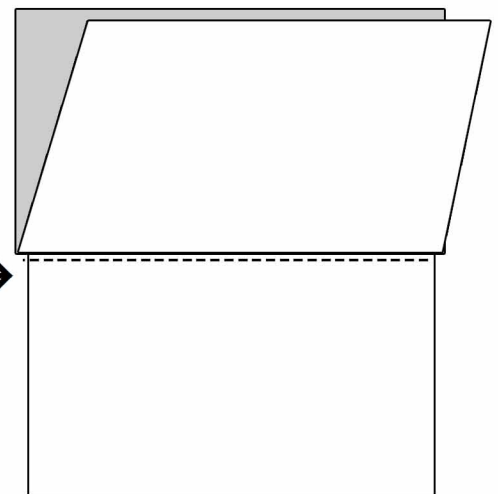


Quote Tote


Page 2

Lining:

3. Take pocket piece and fold in half with right sides together (Pic 2) and stitch around all 3 open sides leaving a small 2-3" opening to turn. Turn and press flat. Close the opening with a slip stitch.
4. Place the pocket rectangle on one side of the tote lining 7 1/2" from the top edge centered from side to side. Edge stitch pocket at sides and bottom. Be sure to reinforce the top corners. Add a stitch down the center of the pocket to divide it into two smaller pockets. Stitch several times to reinforce. Set aside. Pic 3
5. Take the other side of the lining and with right sides together join the bottom and the sides up to a point 10" from the bottom. Clip the seam allowance at the point where you stop.

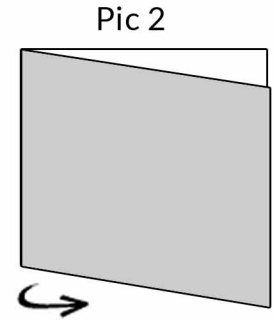

Pic 3

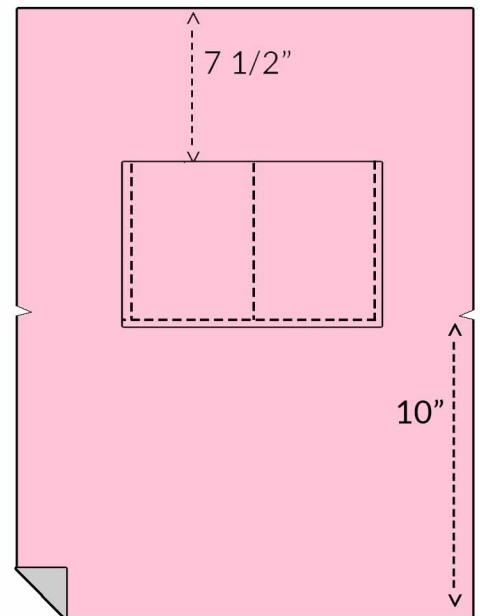

Final Assembly:



6. With right sides together, slip lining into the outside of the tote. Pin the top section of the tote together with the lining starting at one side and then the other leaving a 3"-4" opening at one section so you can turn to the outside. Pic 4

Pic 4


7. Turn tote to the outside and press seams flat. Close the opening with a slip stitch.

8. Take one side of the tote and fold the fabric down 2" toward the lining and press. Pic 5
Fold it over the handle and pin in place. Repeat for the other side.

Pic 5

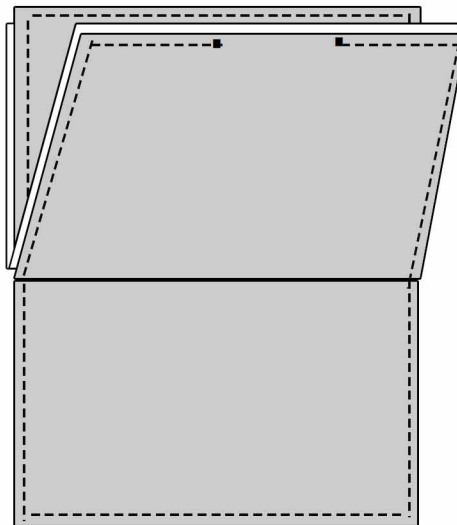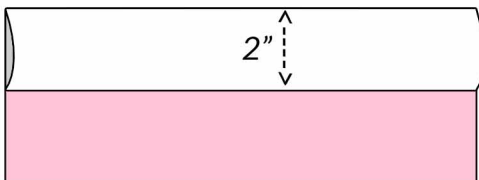

Pic 6

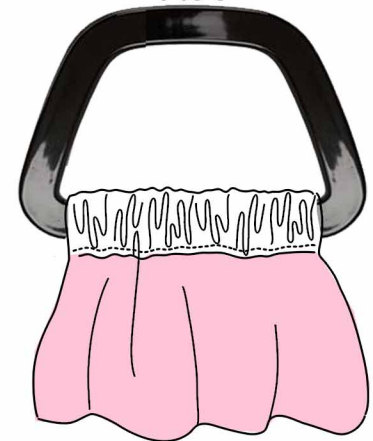

Note: Handle with is much smaller than the top edge of the tote so you will be gathering the fabric as you pin.

9. Carefully edge stitch the tote closed over the handle. Pic 6
Repeat for the other side. you are now ready to use your tote!