Designed by LJ Simon
Featuring the Kantha Collection by Whistler Studios
Bag Size Approximately: 16" x 12"



PLEASE NOTE: BEFORE MAKING YOUR PROJECT, CHECK FOR ANY PATTERN UPDATES AT WINDHAMFABRICS.COM'S FREE PROJECTS SECTION.





FABRIC	SKU NUMBER	YARDAGE
312	51017-X Multi	1 yard

#### **ADDITIONAL REQUIREMENTS**

1 yard: 10/32 or 1/4" cotton piping cord

#### Special Notes:

\*\* All seam allowances are 1/4" wide Make sure you take your time to cut and sew carefully.

#### **CUTTING**

From: 51017-X Multi

Cut (1) 27 1/2" x 13" rectangle for bag body Cut (1) 7 3/4" x 13" rectangle for bag front inset

Cut (1) 7 3/4" x 11" rectangle for inner pocket

Cut (2) 3" x WOF (width of fabric) for handles Cut (3) 2" strips on bias for corded piping


Cut (2) bottom sections following template provided


#### See Cutting Layout


### **ASSEMBLY**

- 1. Take inner pocket and fold 1/2" toward the wrong side. Press flat. Zigzag stitch at open edge. Diagram 1
- With wrong sides together, place the pocket on 7 3/4" x 13" bag front inset, matching up bottom and side edges. Pin in place then 1/8" edge stitch down each side to secure.
- With wrong sides together, seam allowance facing OUT, sew the pocket section to one side of the 27 1/2" x 13" bag body. Repeat for the other side. Press seam allowance flat toward the sides away from pocket. Diagram 3
- 4. Zigzag stitch on top of seam allowance on outside of bag to hold seam allowance down. See Detail

Diagram 3

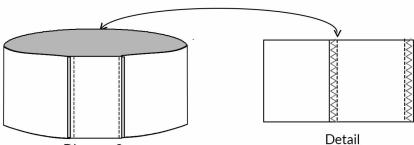


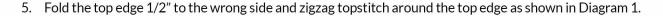

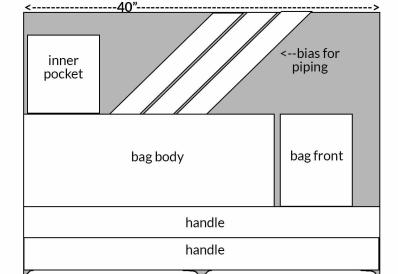


bottom

**Cutting Layout** 



inside bottom







- 6. With right sides together, join the short ends of the 2" bias strips perpendicular to each other. Machine stitch a 45 degree diagonal from edge to edge. Diagram 4
  Press seam allowance open. Repeat for the 3rd strip adding it to the end.
- Diagram 4
  er.
  ees.
  ice to 1/4".


Diagram 5

- 7. With wrong sides together, sandwich the corded piping between the strip and match up edges. Using a zipper foot, sew as close as you can to the piping to make a cover. Trim seam allowance to 1/4". Diagram 5
- 8. Take the two bottom pieces and with wrong sides together, edge stitch around to hold them together. Diagram 6
- 9. With seam allowance facing the edge of bottom piece, pin the piping around the bottom. It is best to then baste in place to be sure it doesn't shift in sewing. Overlap ends on one side by crossing the ends over each other when you have sewn all around. Cut off excess so you have about 1" extension beyond overlap. Carefully cut away the cord inside the piping in the seam allowance to reduce bulk when stitching over the overlap. Diagram 7

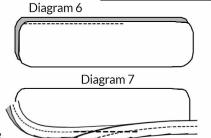

- 10. With the wrong side facing out, center the pocket inset from side to side on the flat. Put a pin on each bottom and top edge to mark. Take the bottom piece and fold in half lengthwise and mark with a pin.
- 11. Line up the pin at the bottom edge of the bag with the pin on each bottom edge of the bag and carefully put pins around the bottom and baste to secure. Then machine stitch the two sections together. Diagram 9

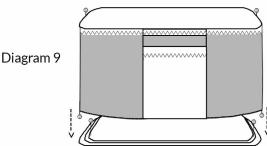

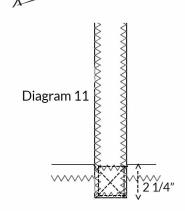

- 12. Turn bag to the outside. Press to make seams as flat as possible.
- 13. With right sides together, sew around all sides of the handle strips leaving a 3 -4" opening on one long side to turn to the outside. Clip corners and turn to the right side. Slipstitch the opening closed. Zigzag stitch around all sides near the edge. Diagram 10





- 14. On top edge where you placed a pin to mark to the sides of the bag, center the handle strap over that point and extend 2 1/4" below the top edge of the bag. Diagram 11
- 15. Straight stitch around all sides and stitch an 'X' in the middle to make it more secure. Repeat for the other side.

Your Hobo Bag is now complete and ready to use.



### **BOTTOM TEMPLATE**

